



 
**Customer Service**

☎ 1-800-618-6798



# ASSEMBLY GUIDE

Model: **CFB1001A**

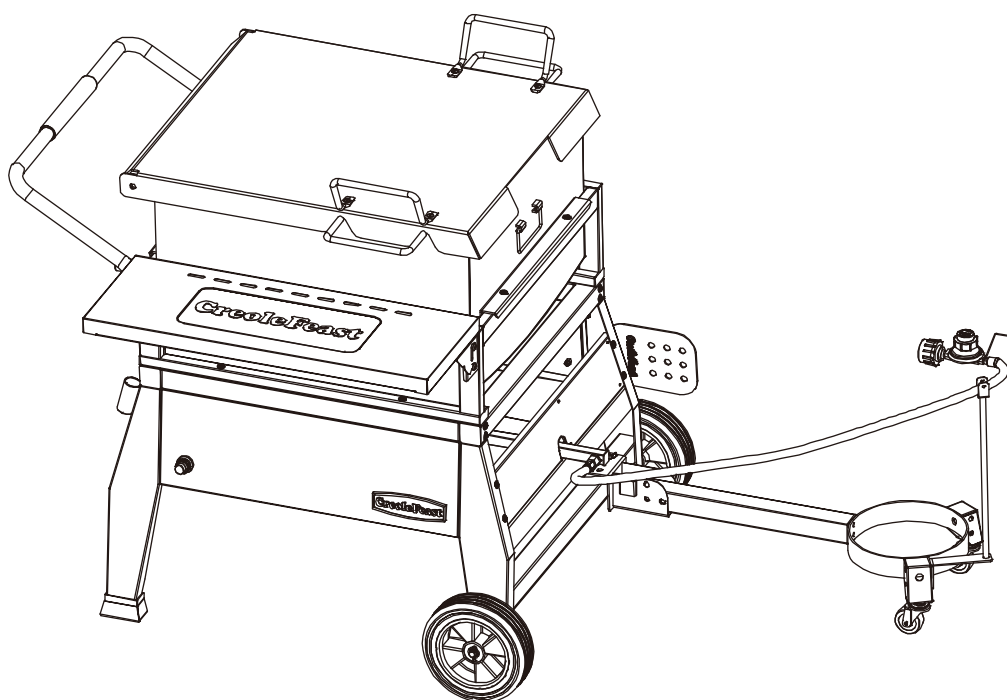

## Single Sack Crawfish Boiler

### FOR YOUR SAFETY!

Use outdoors only! Do not use it inside a building, garage, or any other enclosed space.

Read the instructions before assembling and using the appliance.

DO NOT use the appliance unless it is completely assembled, and all the parts are securely fastened.

This appliance will become very hot, do not move it during use.

Keep children and pets away.

### CONTACT US FIRST!

This appliance has been made to high quality standards.

 
If you have any questions that are not addressed in this Owner's Manual, or you need parts, please call our customer service hotline or send an email to [service@creolefeast.com](mailto:service@creolefeast.com)

 


 



 
 
 


 

 
 
 


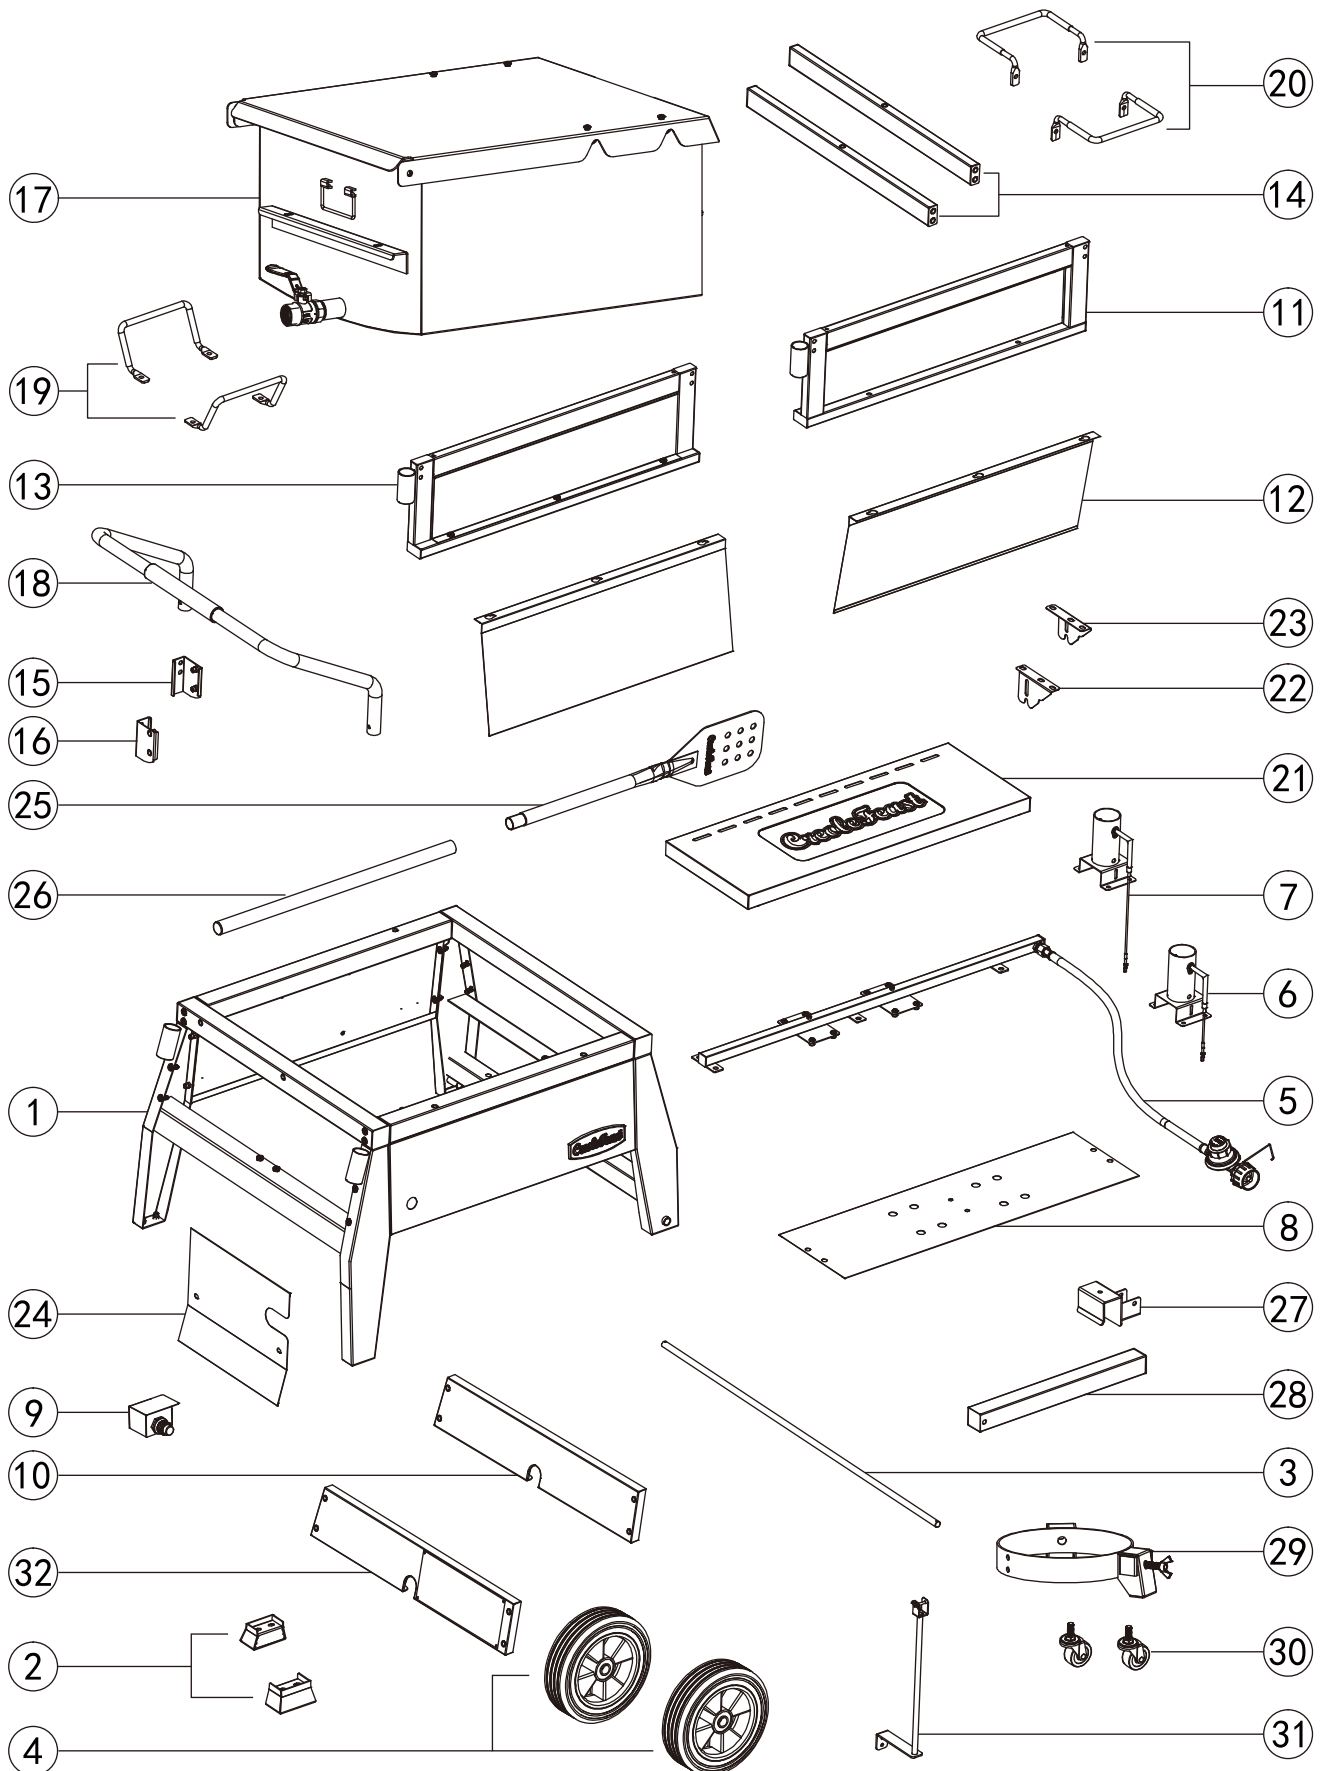
 
 



 




 
 
Please keep this Owner's Manual for future reference.





 

 




 
 
 

Learn more at:



[www.creolefeast.com](http://www.creolefeast.com)





Ref	Description	Illustration	QTY	Ref	Description	Illustration	QTY
1.	Cart ZH-CFB1001004		1	17.	Boiler body ZH-CFB1001002 ZH-CFT2018003 ZH-CFT2018001		1
2.	Leg base H-CFB1001030		2	18.	Left side handle ZH-CFT2018008		1
3.	Wheel axle W-CFT2018015		1	19.	Lid handle W-CFB02001		2
4.	Steel wheel W-CFB1001021		2	20.	Lifting handle W-CFT2018010		2
5.	Burner bracket set with regulator ZH-CFB1001009		1	21.	Front table Z-CFT2018060		1
6.	Short electrode burner H-CFT2018019 W-CFB01051		1	22.	Front table bracket (L) Z-A1CT1005		1
7.	Long electrode burner H-CFT2018019 W-CFB02052		1	23.	Front table bracket (R) Z-A1CT1004		1
8.	Base panel Z-CFB1001038		1	24.	Valve thermal baffle Z-CFB1001055		1
9.	Ignitor DQ404+EGRB-DHQ		1	25.	Paddle W-CFT2018017-1 W-CFB1001004-2		1
10.	Side panel (L) Z-CFB1001034		1	26.	Handle W-CFB1001004-4 W-CFB02007-3		1
11.	Front boiler frame ZH-CFB1001028		1	27.	Cart connector H-CFT2018036		1
12.	Thermal baffle Z-CFB1001044		2	28.	Extension beam ZH-CFT2018020		1
13.	Back boiler frame ZH-CFT2018029		1	29.	LP cylinder carrier ZH-CFT2018022		1
14.	Boiler support beam H-CFT2018030		2	30.	Caster W-CFT2018009		2
15.	Front table joint (R) Z-CFT2018062		1	31.	Hose holder H-CFT2018032		1
16.	Front table joint (L) Z-CFT2018061		1	32.	Side panel (R) Z-CFB1001070		1

 
A	M6x15	20 pcs	B	M6x35	12 pcs	C	Split pin	2 pcs	D	Sleeve	2 pcs	E	M5x12	10 pcs
														
F	M4x12	8 pcs	G	M6x15	8 pcs	H	M6	4 pcs	I	M6	5 pcs	J	Wing bolt	3 pcs
														
K	Split pin	2 pcs	L	Pin	1 pc	M	Pin	1 pc	N	Sleeve	2 pcs	O	Washer	2 pcs
														





<b>TOOLS REQUIRED</b>	
<b>Description</b>	<b>Image</b>
Phillips screwdriver	
Wrench	

 
Before beginning assembly, make sure all parts are present. If any parts are missing or damaged, do not attempt to assemble the products. Contact customer service for replacement parts via telephone or email.

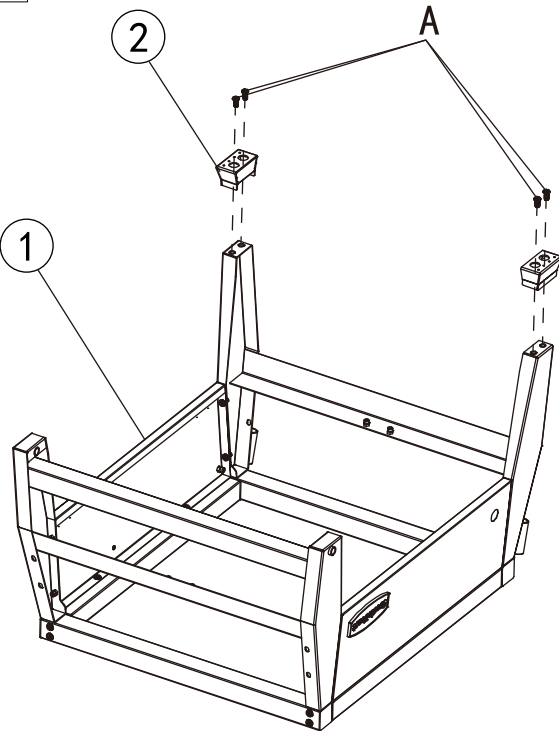- Tools needed (not included): Phillips screwdriver and wrench
- Approximate assembly time: 40 minutes
- Note: The right and left sides of the boiler are designed as if you are facing the front of the boiler.

 
1	A		×4
---	---	---	----



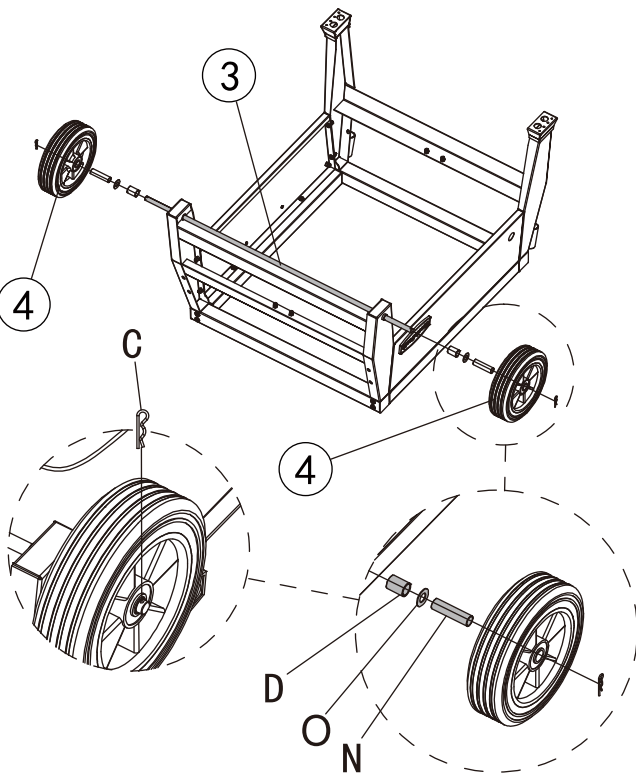

 
2	O		×2
	N		×2
	C		×2
	D		×2

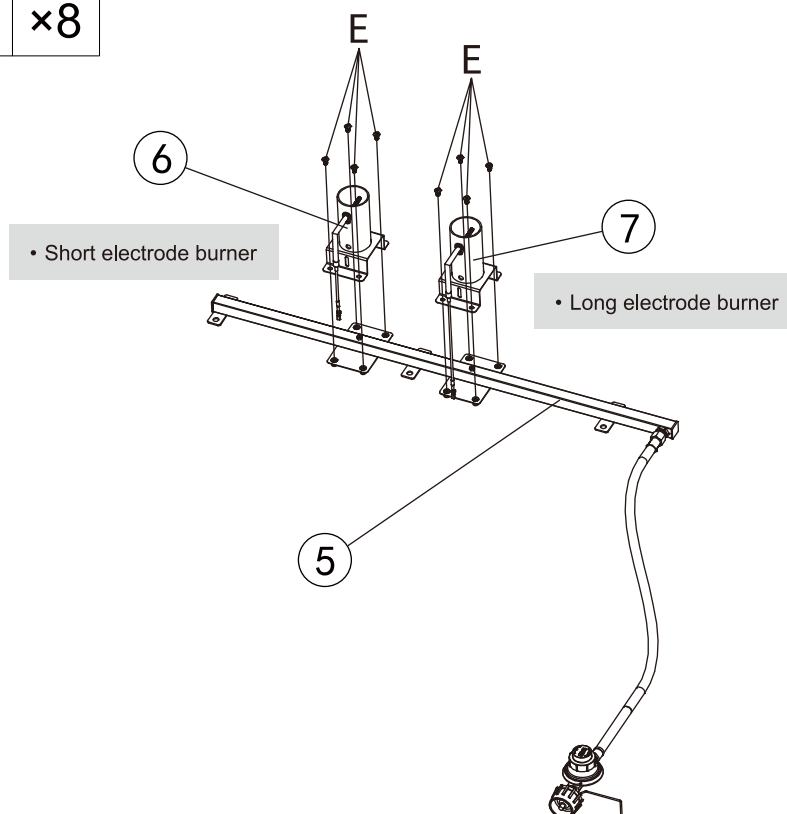

3	E		×8
---	---	---	----



 
4	E		×2
	A		×4

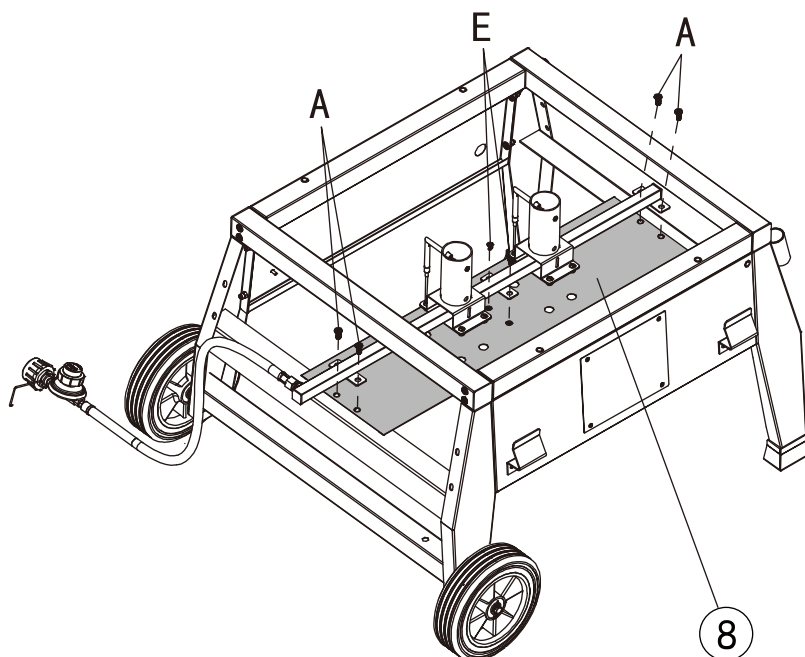

5

- Unscrew ignitor cap and lock nut.

1ST

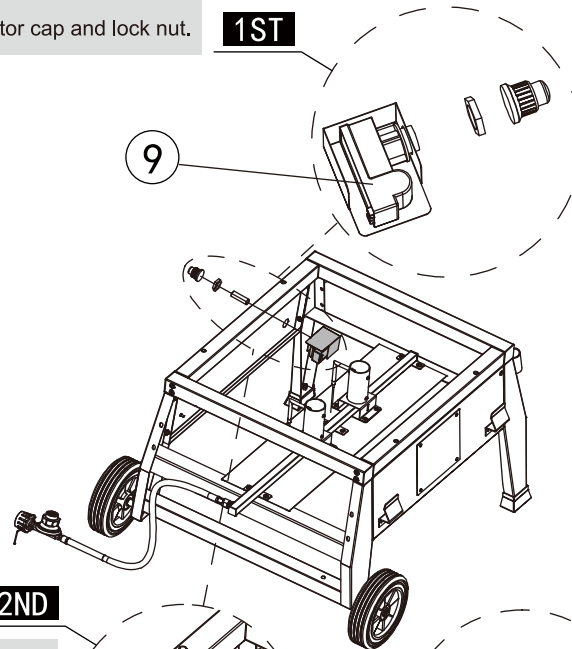 


2ND

- Fix ignitor to front panel with lock nut.

 
3RD

- AA battery not included.

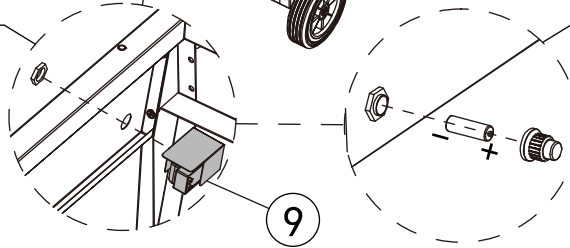

 
6

- Center the electrode wires into the electrode ports.

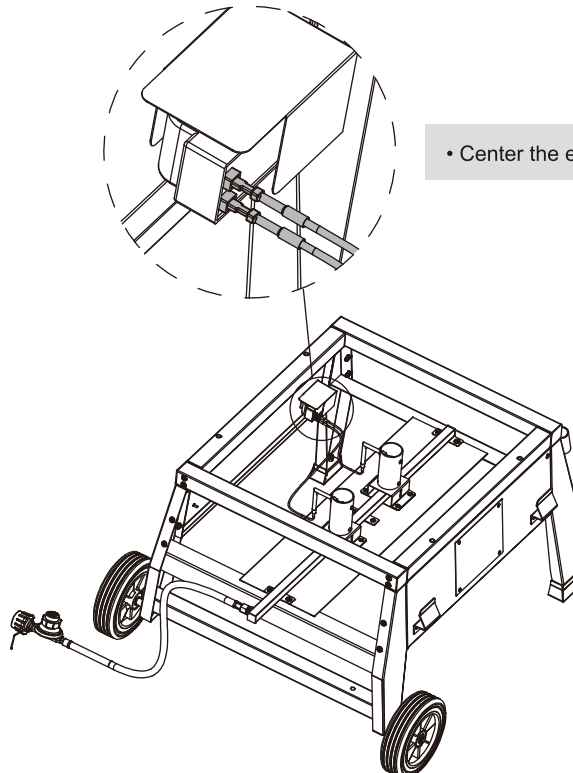 


7

**F**

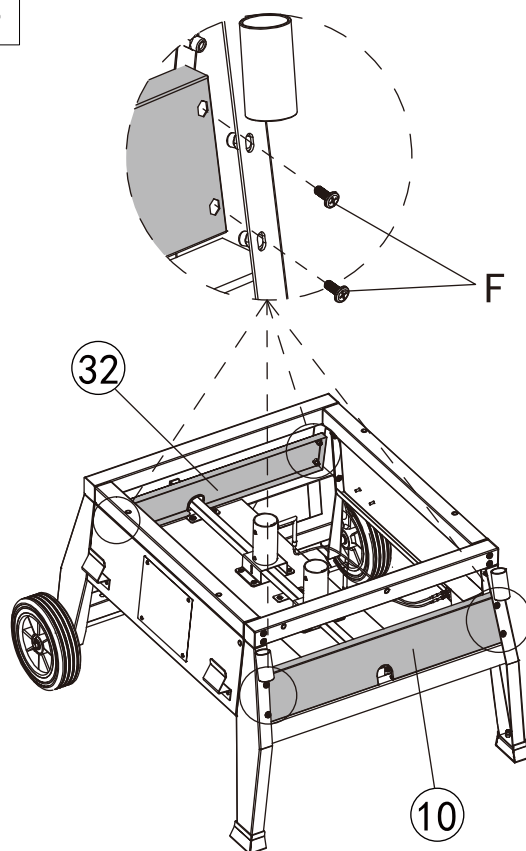 


8

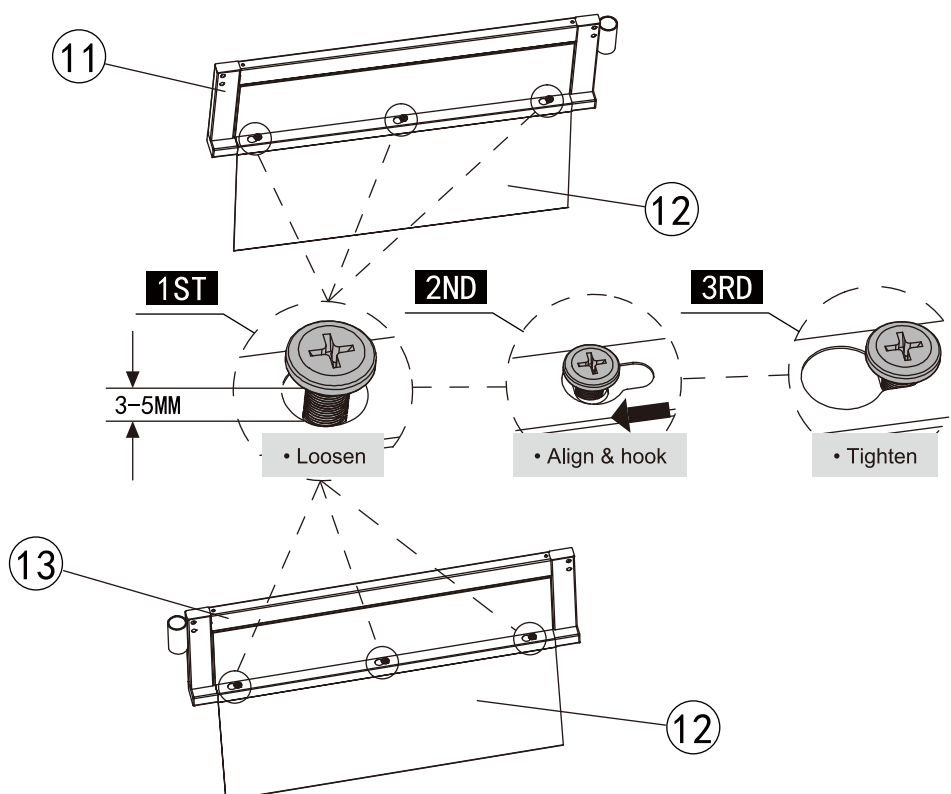 




 
<b>9</b>	B		×2
----------	---	---	----

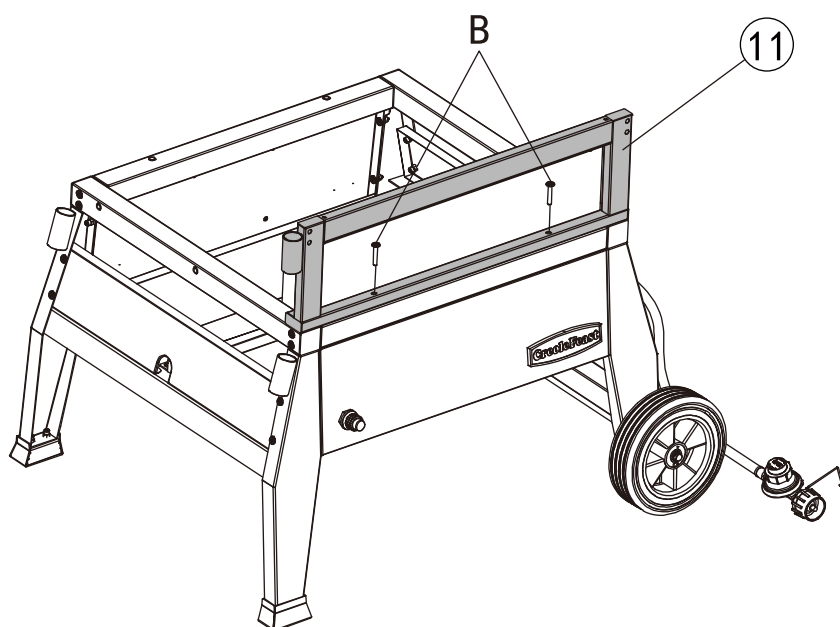

 
<b>10</b>	B		×2
-----------	---	---	----

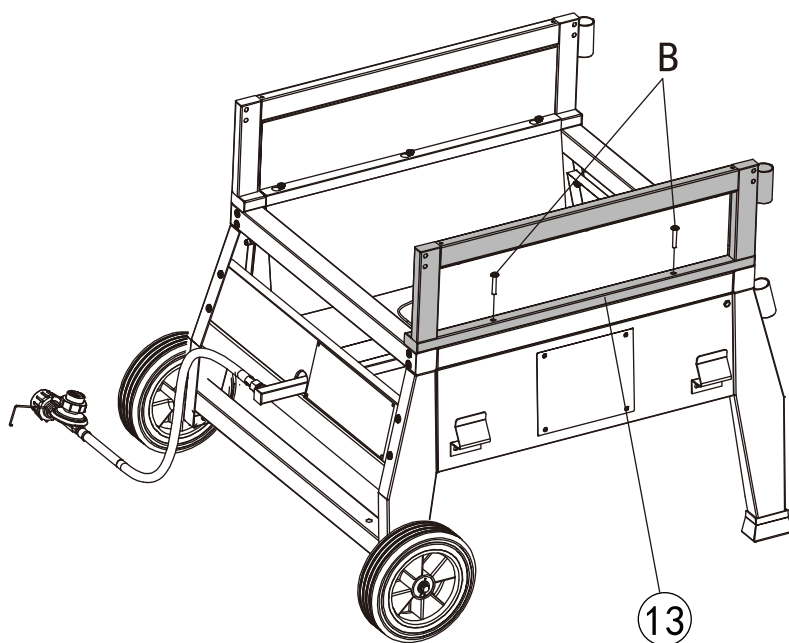

 
**11** B  ×8

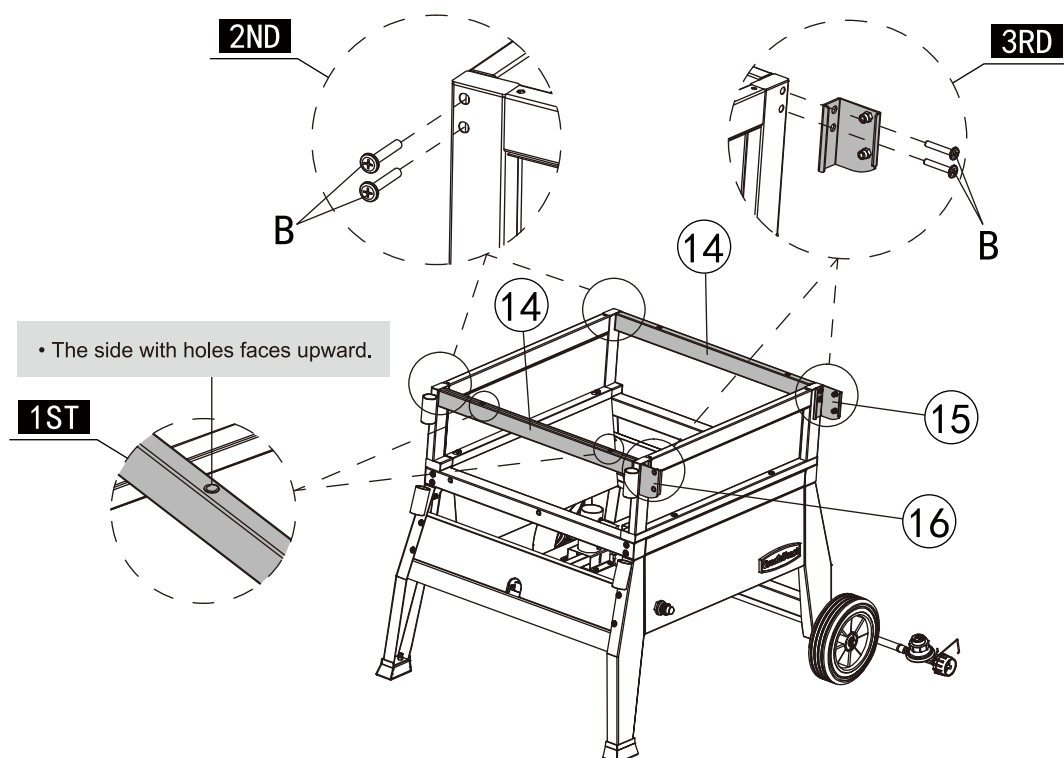

**12** A  ×4

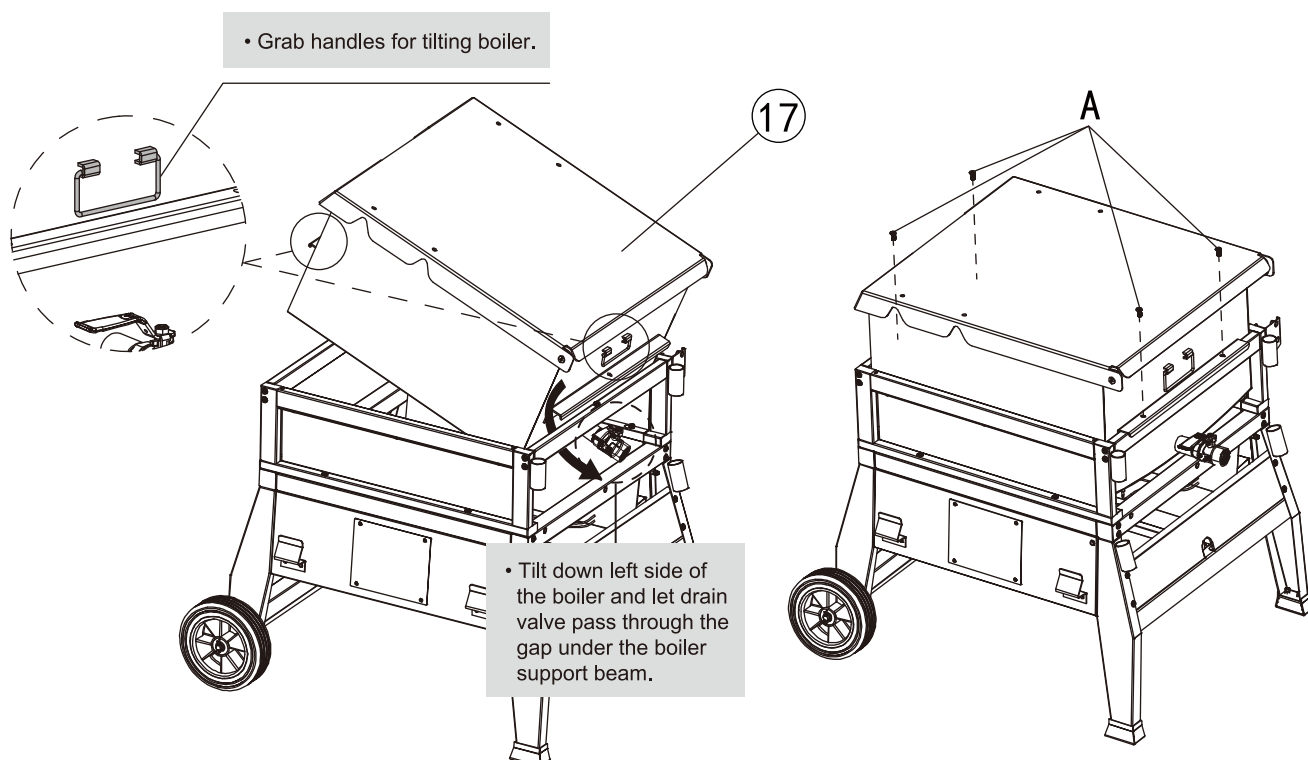

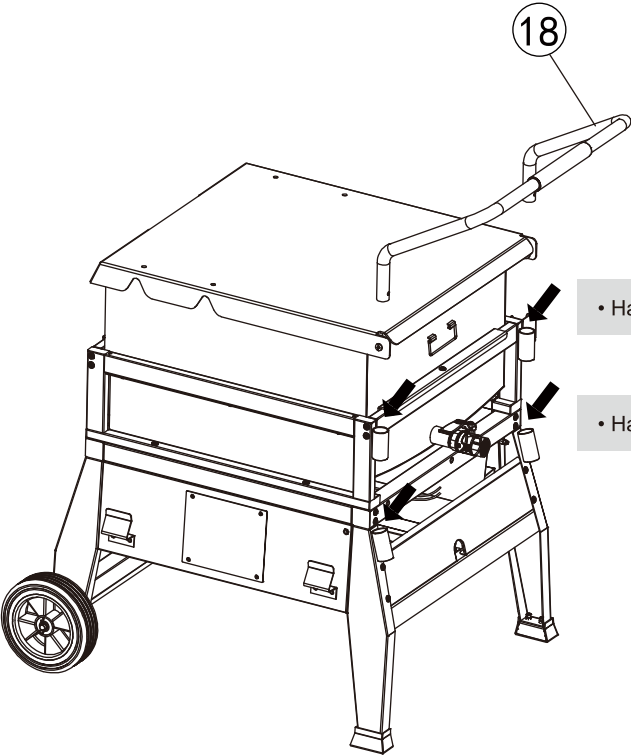

13

 


• Handle mounted on upper level for transportation.

 
• Handle mounted on lower level for dumping.

14

H		×4
G		×4

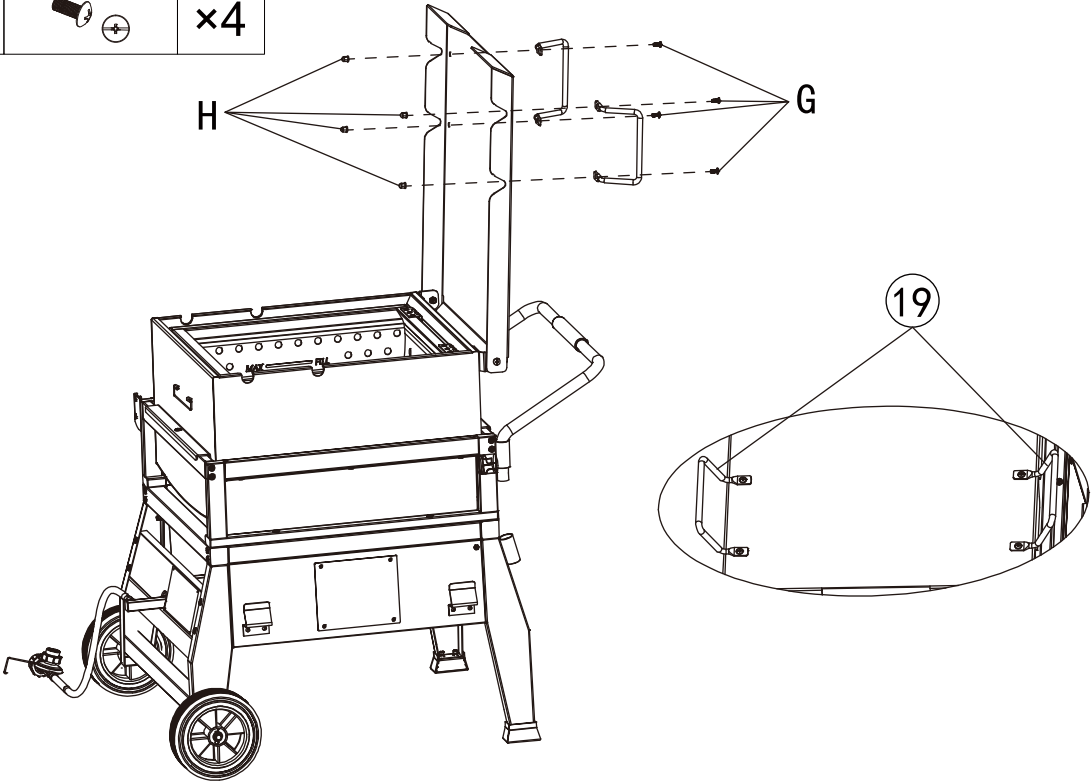 


**15** G  ×4

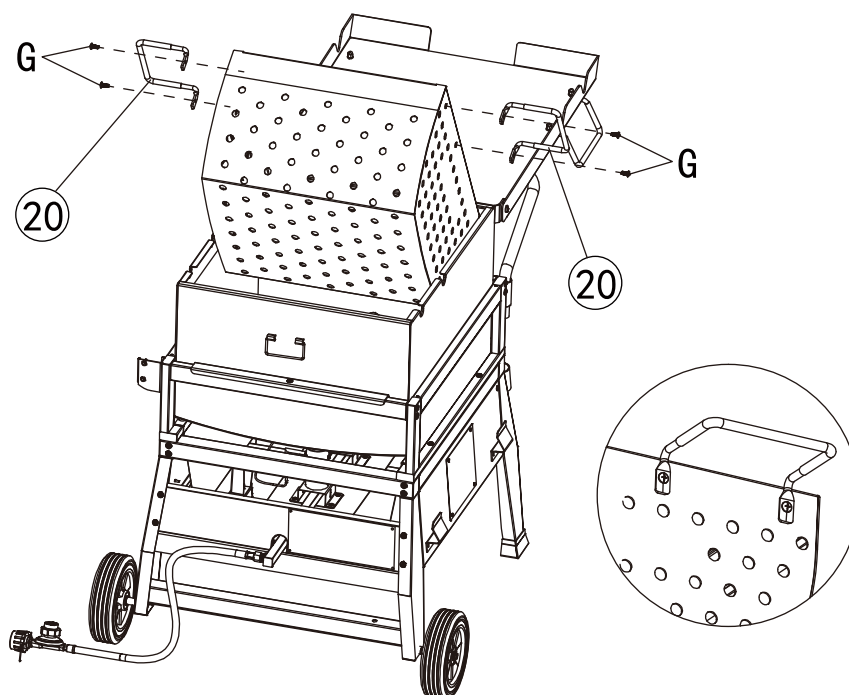 


**16** A  ×4

 
• Do not secure the bolts until step 17.

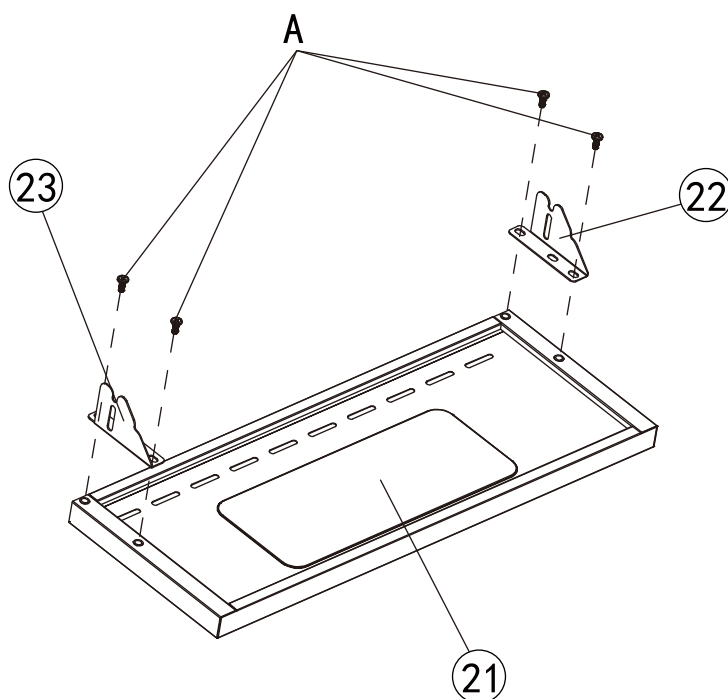

 
17 I  ×4

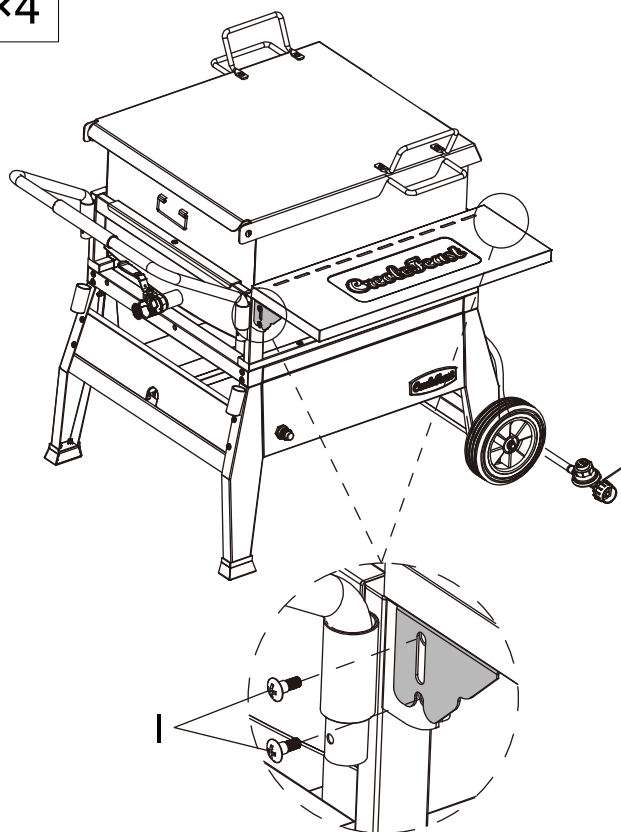

 

18 A  ×2

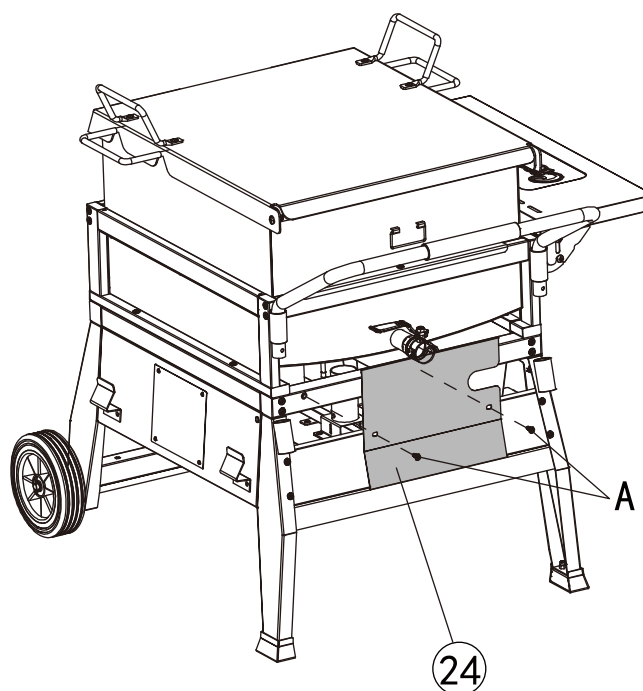 


19

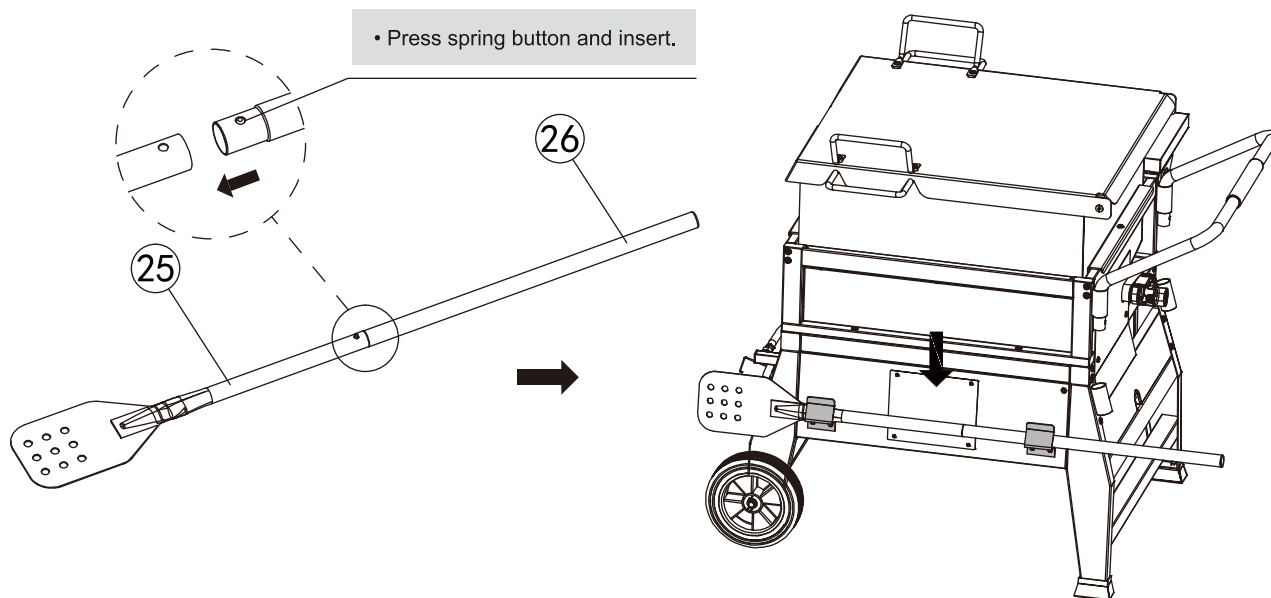 


20

 
M		×1
K		×1

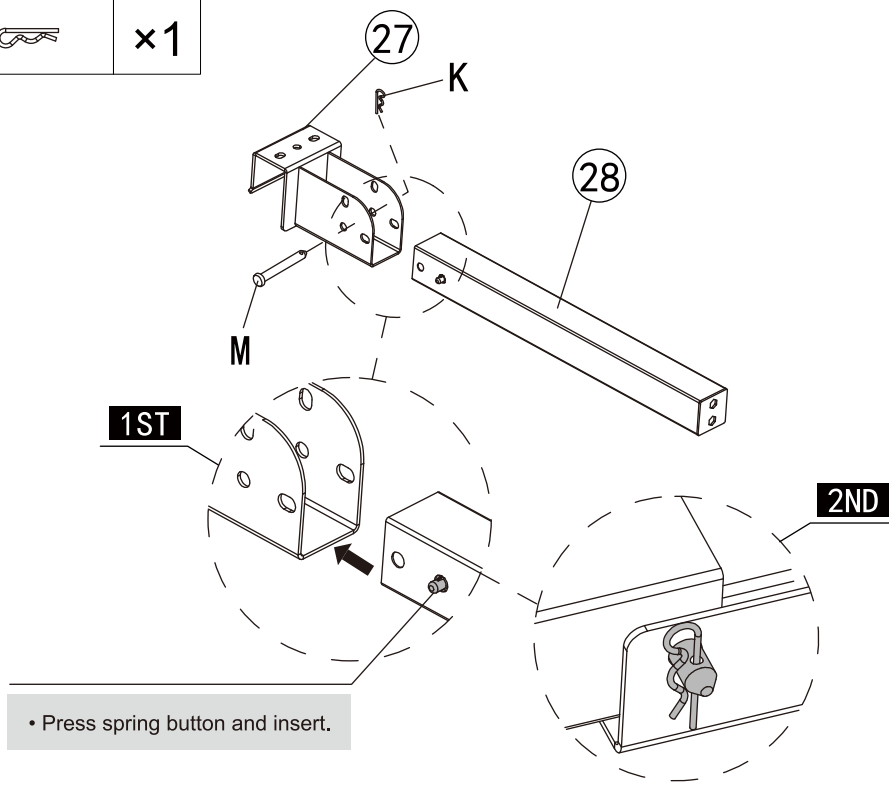

 
21 A  ×2

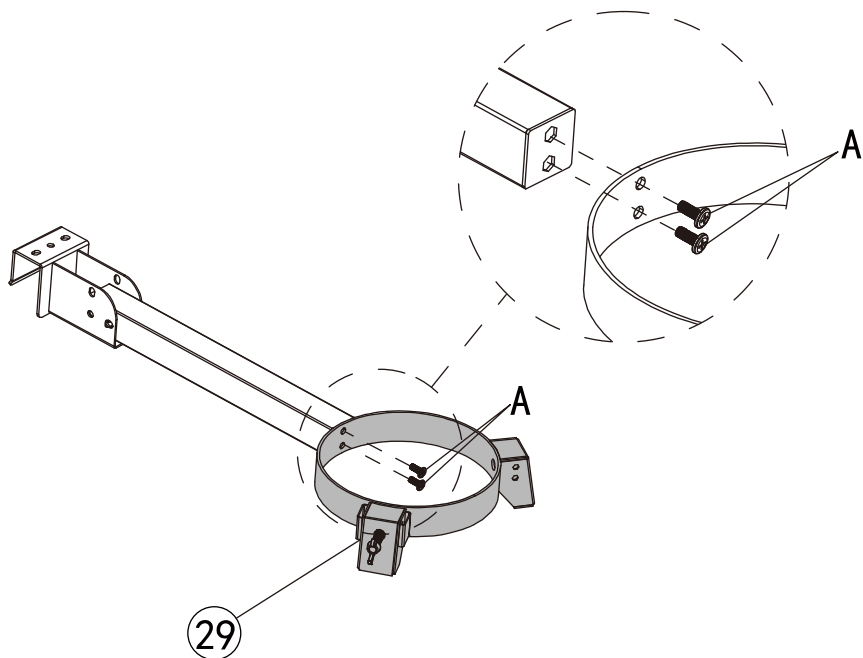

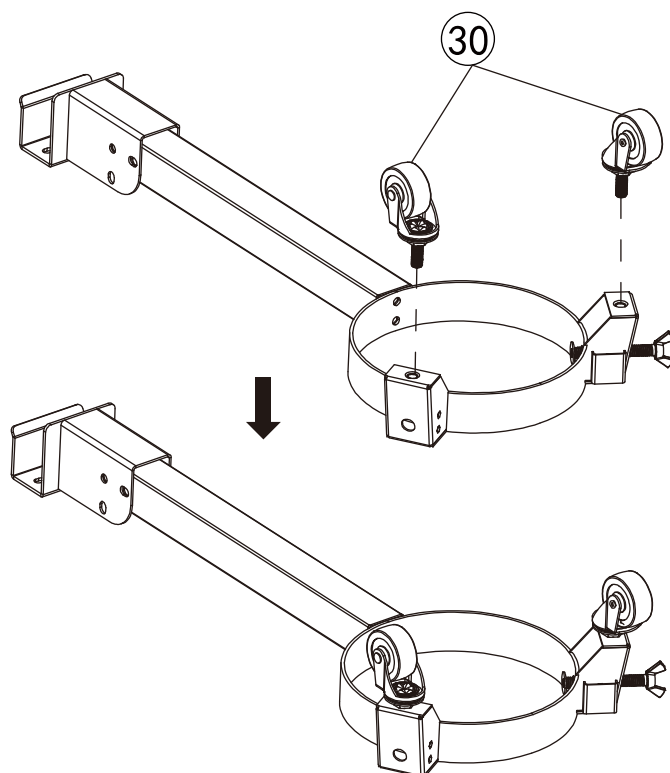

 
22

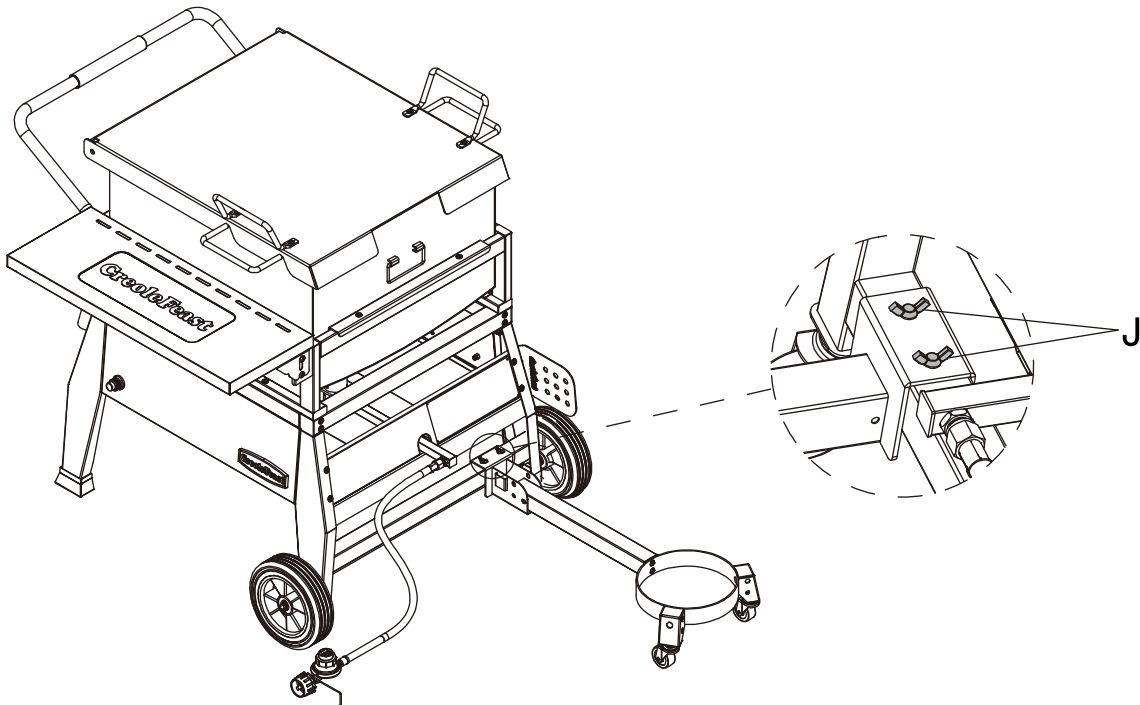

23	J		×2
----	---	---	----

 



24	I		×1
	J		×1

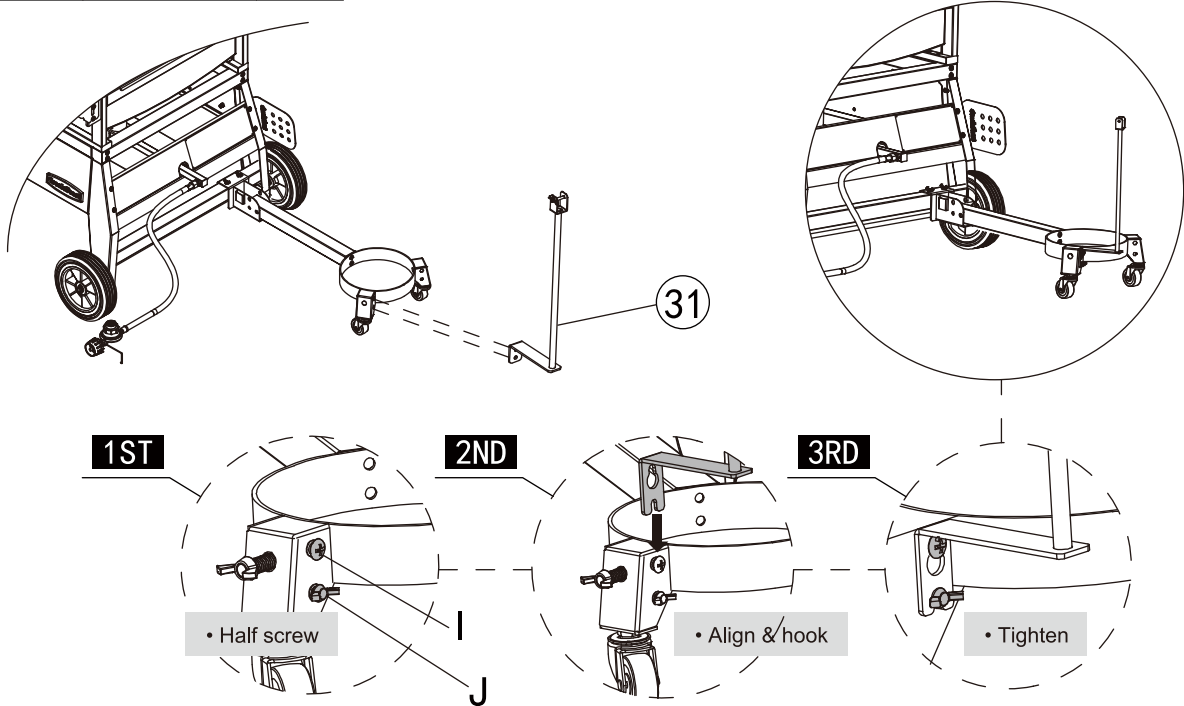



25

L		×1
K		×1

